
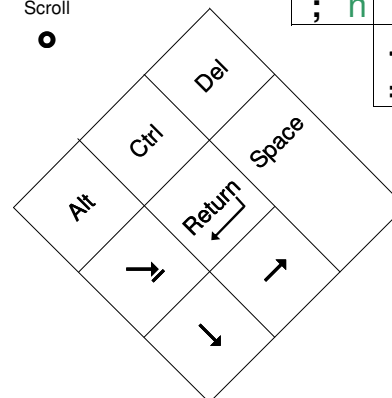


F1	F2	F3	F4	F5	F6
⏪	⏩	■	⏮	⏭	⏪
~ #	! 1	" 2	£ 3	\$ 4 €	% 5
K56	Q q	P w	Y e	C r	B t
Fn	A a	N s	I d	S f	F g
↑	< , z	> . x	J c	G v	@ ' b
	⏪	 \	{ [- _	

Esc	Num Lock	7 ↵	8 ↑	9 ⌆	/	▲	☰
Caps Lock	=	4 ←	5	6 →	*	◀▶	⌆
Prt Sc	Scr Lk	1 ↵	2 ↓	3 ⌆	-	◀▶	⌆
Pause	Ins	0 Ins	. Del	Enter ↵	+	⊞	Alt Gr

F7 F17	F8 F18	F9 F19	F10 F20	F11 F21	F12 F22
^ 6	& 7 F23	* 8 F24	(9) 0	⏪ '
V y	M u	U i	Z o	L p	K14
D h	T j	H k	O l	R :	Fn ;
:	W m	K ,	< .	> .	X '
;	+ =	}]	? /	⏪	↑

Maltron Qwerty Caps Num Scroll

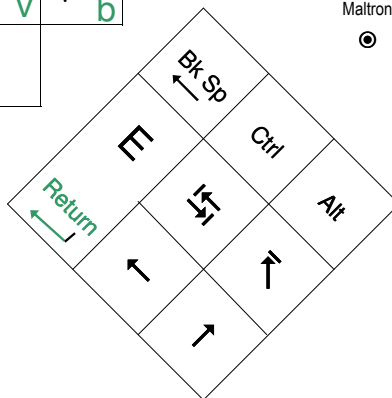

Win/PC
English UK

L89P Maltron

Qwerty