
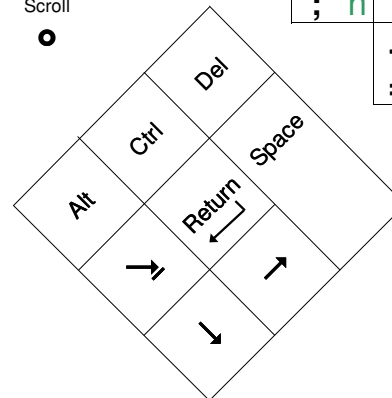


F1	F2	F3	F4	F5	F6
⏪	⏩	■	⏮	⏭	⏪
KEY 42	! 1	@ 2	# 3	\$ 4	% 5
KEY 56	Q q	P w	Y e	C r	B t
Fn	A a	N s	I d	S f	F g
↑	< , z	> . x	J c	G v	" ' b
	⏪	\	{ [- _	

Esc	Num Lock	7	8	9	/	▲	☰
Caps Lock	=	4	5	6	*	◀▶	⌂
Prt Sc	Scr Lk	1	2	3	-	◀▶	⌂
Pause	Ins	0	.	Enter	+	⊞	Alt Gr
F15	F16	Ins	Del	↵			

F7	F8	F9	F10	F11	F12
F17	F18	F19	F20	F21	F22
^ 6	& 7	* 8	(9) 0	~ `
V y	M u	U i	Z o	L p	KEY 14
D h	T j	H k	O l	R ;	Fn
: ; n	W m	K ,	< - > .	X " ' ,	↑
+ =	}]	? /	⏪		

Maltron Qwerty Caps Num Scroll

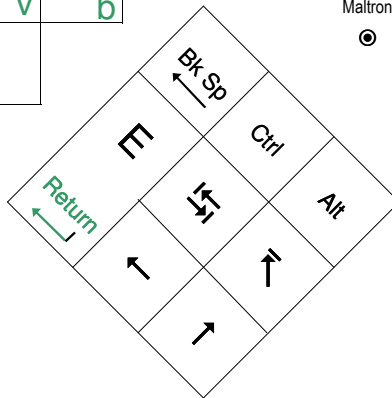

Win/PC
English US

L89P Maltron

Qwerty