
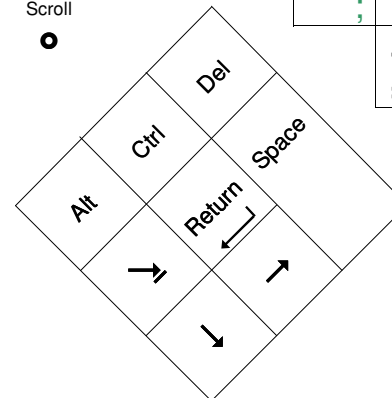


F1	F2	F3	F4	F5	F6
⏪	⏩	■	⏮	⏭	⏪
KEY 42	! 1	@ 2	# 3	\$ 4	% 5
KEY 56	Q q	W w	E e	R r	T t
Fn	A a	S s	D d	F f	G g
↑	Z <	X >	C	V	B " ' , . / \ [] - =

Esc	Num Lock	7	8	9	/	▲	☰
Caps Lock	=	4	5	6	*	◀▶	⌂
Prt Sc	Scr Lk	1	2	3	-	◀▶	⌂
Pause	Ins	0	.	Enter	+	⊞	Alt Gr
	F13	F14	Ins	Del			

F7	F8	F9	F10	F11	F12
F17	F18	F19	F20	F21	F22
^	&	*	()	~
6	7 F23	8 F24	9	0	`
Y y	U u	I i	O o	P p	KEY 14
H h	J j	K k	L l	:	Fn
N ;	M w	<	>	"	↑
	+ =	}]	? /	☰	

Maltron Qwerty Caps Num Scroll

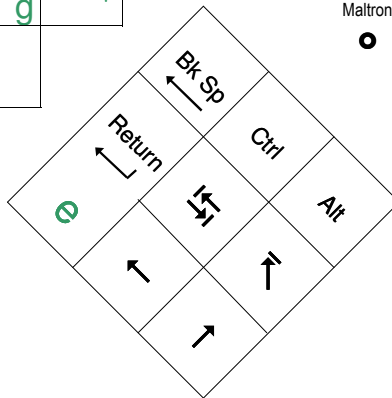

Win/PC
English US

L89P Qwerty Maltron