
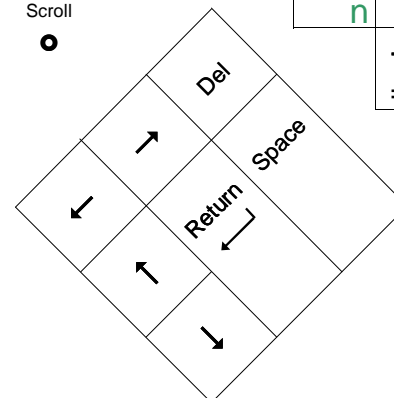


F1	F2	F3	F4	F5	F6
!	"	£	\$	%	^
1	2	3	4 €	5	6
~	@	<	>	P	Y
~	' q	, w	. e	r	t
# \	A	O	E	U	I
# \	a	s	d	f	g
↑	:	Q	J	K	X
↑	; z	x	c	v	b
	Ctrl		Alt	-	-

Esc	Num Lock	7	8	9	/	▲
		↵	↑	⌂	/	▲
Caps Lock	=	4	5	6	*	◀▶
		←	→	→	*	◀▶
Prt Sc	Scr Lk	1	2	3	-	◀▶
		⏎	↓	⌂	-	◀▶
Pause	Ins	0	.	Enter	+	⏏
		Ins	Del	↵	+	⏏

F7	F8	F9	F10	F11	F12
&	*	(	)	{	}
7	8	9	0	[	]
F	G	C	R	L	? ~
y	u	i	o	p	/ #
D	H	T	N	S	:   @
h	j	k	l	;	\ '
B	M	W <	V >	Z ?	↑
n	m	,	.	/	↑
+	Alt Gr		Ctrl		
=					

Dvorak
  Qwerty
  Caps
  Num
  Scroll

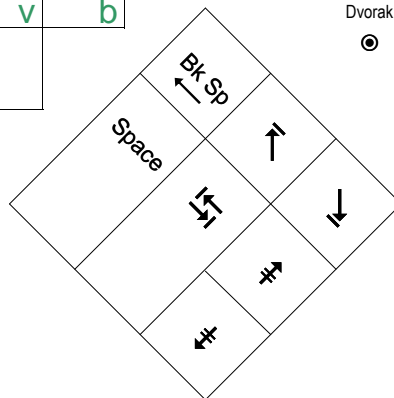

Win/PC  
English UK

L90  
Dvorak

Qwerty