
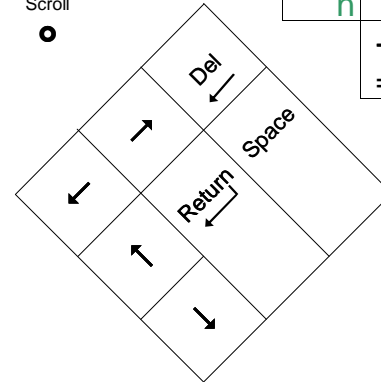


F1	F2	F3	F4	F5	F6
!	@	#	\$	%	^
1	2	3	4	5	6
~ `	" '	< , q	> . w	P e	Y r t
K45	A a	O o	E e	U u	I i
↑	: ;	Q q	J j	K k	X x
	Ctrl	Fn	Alt	- _	

Esc	Num Lock	7 ↖	8 ↑	9 ↗	/ *	▲
Caps Lock	=	4 ←	5	6 →	*	◀▶
Prt Sc	Scr Lk	1 ↙	2 ↓	3 ↘	- _	◀▶
Pause	Ins	0 Ins	. Del	Enter ↵	+ =	⏏

F7	F8	F9	F10	F11	F12
& 7	* 8	(9) 0	{ [}]
F y	G u	C i	R o	L p	? /
D h	H j	T k	N l	S ;	 "
B n	M m	W ,	V .	Z /	? ↑
+ =	Alt	Fn	Ctrl		

Dvorak Qwerty Caps Num Scroll

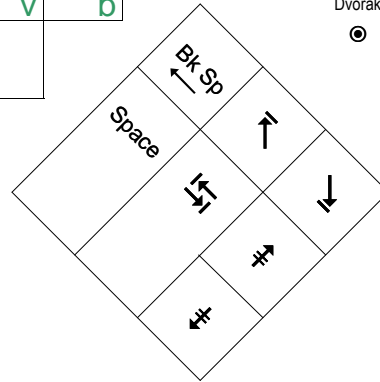

Win/PC
English US

L90 Dvorak Qwerty